



Mobile Locator

Kurzanleitung
Guide rapide
Guida rapida
Quick Guide



Thank you

for choosing Tracker.com! In the following pages you will find key information about how to operate your Mobile Locator.

The Mobile Locator is preconfigured and equipped with a SIM card. It works only with the SIM card installed by Tracker.com. Any other use of the SIM card or swapping it out with another is not permitted.

Contents

40–42	Mobile Locator buttons and components
43	First steps
44	Switching on/off
44	Volume control
44	Keypad lock
45	SOS button, call buttons
46	Placing a call
46	Accepting an incoming call
46	Ending a call, refusing a call
47	GSM reception status display
47	Battery display
47	GPS reception status display
48	Dashboard admin.tracker.com
48	Finding a position
48	Programming numbers
48	Loading call credits

Mobile Locator buttons and components

- (1) On/Off
- (2) Volume control
- (3) Keypad lock
- (4) Mini USB socket
- (5) GSM status display
- (6) Battery display
- (7) GPS status display
- (8) SOS button
- (9) Calling buttons 1–4
- (10) Accept an incoming call
- (11) End/refuse a call
- (12) Loudspeaker
- (13) Microphone





First steps

1. Plug the supplied power adapter into the mini USB socket (4) and charge the battery until the battery display (6) is constantly lit.
2. Hold the Mobile Locator outdoors, turn the unit on and wait approximately 2 minutes until the GPS position has been determined (also see page 11).
3. Check the position in the Dashboard at (<https://admin.tracker.com>) and also configure the call buttons 1–4 (at least one number must be entered).
4. While in the Dashboard, make sure that sufficient call credits are available.

The Mobile Locator is now ready and fully functional.

Switching on/off (1 or symbol)

Switching on

Push the On/Off button for a short time. The battery display (6) lights up for a short time and the GSM display (5) begins to flash.

Switching off

Push the On/Off button for 3 seconds.

Volume control (2)

Set the desired audio level with the volume control. Pressing the Quiet button for at least 3 seconds turns the Mute function on or off.

Keypad lock (3)

In order to avoid unintentional calls, the keypad lock (3) should be activated; to do so, slide it into the proper position (locked).

Triggering the alarm with the SOS button (8) functions even if the keypad is locked.

SOS button (8), call buttons 1–4 (9)

Configuring the buttons with the desired numbers to call must be done ahead of time in the Dashboard (<https://admin.tracker.com>).

It is mandatory that the SOS button and/or call button #1 be configured with a number.

To initiate a call with the SOS button (8), push the button for at least 5 seconds.

The SOS button (8) functions even if the keypad is locked.

If the 7x24 Help Line option is activated, the SOS button is programmed to contact the emergency desk of the euro help line. If the 7x24 Help Line option is not activated, the SOS button is configured identical to call button (1).

The buttons can be reprogrammed at any time in the Dashboard (<https://admin.tracker.com>).

Placing a call

To call the preprogrammed number, even if the keyboard lock **(3)** is activated, press the SOS button **(8)** at least 5 seconds. The connection is automatically made.

To call one of the additional preprogrammed numbers on call buttons 1–4, once the keypad lock **(3)** is released, first press button 1–4 and afterwards press the Call button **(10)**.

Accepting an incoming call

To accept an incoming call, press the Call button **(10)**.

Ending a call, refusing a call

To end a call or refuse an incoming call, press the Call Complete button **(11)**.

GSM reception status display (5)

Flashes quickly

Connection with the GSM network and tracker.com is being established.

Flashes slowly

The unit is connected with the GSM network and tracker.com.

Battery display (6)

Flashes slowly

Charging in progress.

Constantly lit

Battery fully charged.

Flashes quickly, beeps every 30 seconds

Charging capacity at 5% - battery must be recharged as soon as possible.

Status display for GPS reception (7)

Flashes quickly

Search for satellites in progress.

Lights up constantly for 2 seconds

The GPS position is valid.

Dashboard admin.tracker.com

Log on to the web site <https://admin.tracker.com> with your personal login information.

Finding a position

Recall the unit's last known position or retrieve the current position.

Programming telephone numbers

Manage your account and configure your numbers to be called when the SOS button and call buttons 1–4 are pressed.

Loading call credits

Load call credits in the Dashboard at <https://admin.tracker.com>.

Further information at <https://admin.tracker.com>.

Tracker.ch AG

Webereistrasse 47

CH-8134 Adliswil

T: +41 43 543 43 00

F: +41 43 543 43 01

Info@tracker.ch

Hotline: +41 43 543 43 00

support@tracker.ch



This equipment complies with the European R&TTE directive. Conformity at:
<http://www.tracker.com/CE>

EN

IT

FR

DE